

TIDALFLUX 2300 F Technical Datasheet

Electromagnetic flow sensor for partially filled pipes

- Measurement in partially filled pipes up to DN1600 / 64"
- Patented, non-contact level measurement
- Measurement possible down to 10% filling of pipe

The documentation is only complete when used in combination with the relevant documentation for the signal converter.





1	Product features	3
	1.1 Solution for partially filled pipes1.2 Options1.3 Measuring principle	5
2	Technical data	7
	2.1 Technical data2.2 Dimensions and weights2.3 Measuring accuracy	11
3	Installation	14
	 3.1 Intended use	
4	Electrical connections	20
	 4.1 Safety instructions	
5	Notes	23

1.1 Solution for partially filled pipes

The **TIDALFLUX 2000** flow sensor with integrated and non-contact capacitive level measuring system provides accurate flow measurement in partially filled pipes. TIDALFLUX is designed to measure reliably between 10% and 100% of the pipe cross section. The integrated level sensors in the liner are in no contact with the liquid and are therefore insensitive against fat and oil floating on the surface.



- ① Various flange standards
- 2 Patented, capacitive and non-contact flow level measuring system integrated in the liner
- ③ Remote converter IFC 300 (PF)

Highlights

- For partially filled pipes in the water and wastewater industry
- Broad diameter range up to DN1600 / 64"
- High abrasion resistance and chemical resistance
- Measurement possible between 10% and 100% filling
- Electrodes for flow measurement are below 10% filling level, therefore no blind folding by fat and oil floating on the water surface
- Complete factory calibration no on-site calibration necessary

Industries

- Water
- Wastewater

Applications

- For partially filled pipes instead of expensive siphon tube constructions
- Water and wastewater
- Surface water
- Biological and chemical wastewater

PRODUCT FEATURES

1.2 Options

The solution for the water and wastewater industry



Flanged flowsensor

- Robust construction, completely welded
- Various flange standards like DIN, ANSI and JIS
- IP 68
- ATEX / IECex Zone 1
- 220 / 110 V or 24 VDC power supply
- Polyurethane liner



Remote converter

- IFC 300 F (PF)
- Stainless steel
- ATEX / IECex Zone 1
- Extra connector space (for use with NPT)
- Mounting to wall or 2"pipe with clamps
- mA, HART or Modbus

1.3 Measuring principle

The TIDALFLUX 2000 is an electromagnetic flow sensor with an integrated capacitive level measurement system, designed for electrically conductive process liquids. The flow rate Q(t) through the tube is: $Q(t) = v(t) \times A(t)$, in which

v(t) = flow velocity of liquid product A(t) = wetted area of tube section.

The flow velocity is determined on basis of the known electromagnetic measurement principle. The two measuring electrodes are located in the lower part of the measuring tube, on a level of approx. 10% of the inner diameter of the pipe in order to get a reliable measurement up from a level of 10%.

An electrically conductive fluid flows inside an electrically insulating pipe through a magnetic field. This magnetic field is generated by a current, flowing through a pair of field coils. Inside of the fluid, a voltage U is generated:

U = v * k * B * D in which: v = mean flow velocity k = factor correcting for geometry B = magnetic field strength D = distance between electrodes

The signal voltage U is picked off by electrodes and is proportional to the mean flow velocity v and thus the flow rate q. The signal voltage is quite small (typically 1 mV at v = 3 m/s / 10 ft/s and field coil power of 1 W). Finally, a signal converter is used to amplify the signal voltage, filter it (separate from noise) and convert it into signals for totalising, recording and output processing.

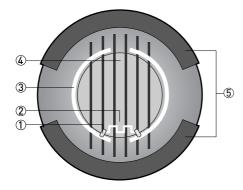


Figure 1-1: Measuring principle TIDALFLUX

- Electrodes
- Induced voltage (proportional to flow velocity)
- ③ Capacitive plates in liner for height measurement
- ④ Magnetic field
- (5) Field coils

The wetted area A is computed from the known inside diameter of the pipe by the patented capacitive level measurement system that is built into the measuring tube liner. The required electronics unit is accomodated in a compact housing that is mounted on top of the measuring sensor. This electronics is connected to the remote IFC 300 F converter by means of a digital communication line.

2.1 Technical data

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Download Center).

Measuring system

Measuring principle	Faraday's law			
Application range	Electrically conductive fluids			
Measured value				
Primary measured value	Flow velocity			
	Level			
Secondary measured value Volume flow				

Design

Features	Flange version with full bore flow tube
	Standard as well as higher pressure ratings
	Broad range of nominal sizes
Modular construction	The measurement system consists of a flow sensor and a signal converter. It is available as remote version. More information about the signal converter can be found in the documentation of the signal converter.
Remote version	In field (F) version with IFC 300 converter: TIDALFLUX 2300 F.
	Note: Compact versions are not available.
Nominal diameter	DN2001600 / 864"

2 TECHNICAL DATA

Measuring accuracy

Reference conditions	Slope: 0%				
	Medium: water				
	Electrical conductivity: 505000 µS/cm				
	Temperature: +10+30°C / +50+86°F				
	Inlet section: ≥ 10 DN				
	Outlet section: $\geq 5 \text{ DN}$				
	Flow velocity at full scale: > 1 m/s / 3 ft/s				
	Operating pressure: 1 bar / 14.5 psi				
	Wet calibrated on EN 17025 accredited calibration rig by direct volume comparison or by master meter.				
Maximum measuring error	For detailed information on the measuring accuracy, see chapter "Measuring accuracy".				
	Related to volume flow (MV = Measured Value, FS = Full Scale)				
	These values are related to the pulse / frequency output				
	The additional typical measuring deviation for the current output is $\pm 10~\mu A$				
	Partly filled:				
	v @ Full Scale \geq 1 m/s / 3.3 ft/s: \leq 1% of FS				
	Fully filled:				
	$v \geq 1 \text{ m/s} \ / \ 3.3 \text{ ft/s:} \leq 1\% \text{ of MV}$				
	v < 1 m/s / 3.3 ft/s: \leq 0.5% of MV + 5 mm/s / 0.2 inch/s				
	Minimum level: 10% of inner diameter				

Operating conditions

Temperature				
Process temperature	0+60°C / +32+140°F			
Ambient temperature	Non ATEX: -40+65°C / -40+149°F			
	ATEX zone 1: -20+65°C / -4+149°F			
	Protect electronics against self-heating with ambient temperatures above 55°C.			
Storage temperature	-50+70°C / -58+158°F			
Measurement range	-12+12 m/s / -40+40 ft/s			
Vacuum load (DN200DN1600 / 864")	500 mbar abs. at $T_{process}$ = 40°C / 600 mbar abs. at $T_{process}$ = 60°C			
[DIN200DIN 1600 / 664]	7.3 psia at T _{process} = 104 °F / 8.7 psia at T _{process} = 140 °F			
Chemical properties				
Physical condition	Conductive liquids			
Electrical conductivity	≥ 50 µS/cm			
Permissible solid content	≤ 20%			
(volume)	If process liquid is slurry: density < 1.15 kg/dm ³ .			

Installation condtitions

Installation	For detailed information see chapter "Installation".				
Flow direction	Forward and reverse.				
	Arrow on flow sensor indicates positive flow direction.				
Inlet run	\geq 5 DN (without disturbing flow, after a single 90° bend)				
	\geq 10 DN (after a double bend 2x 90°)				
	≥ 10 DN (behind a control valve)				
Outlet run	≥3 DN				
Dimensions and weights	For detailed information see chapter "Dimensions and weights".				

Materials

Sensor housing	Standard: sheet steel				
	Other materials on request				
Measuring tube	Austenitic stainless steel				
Flange	Standard: carbon steel, polyurethane coated				
	Other materials on request.				
Liner	Polyurethane				
Connection box	IP 67: polyurethane coated die-cast aluminium				
	IP 68: Stainless steel				
Measuring electrodes	Hastelloy [®] C				
Grounding rings	Stainless steel				
	Tailor made to innerdiameter of connecting pipeline.				
	Necessary if innerside of connecting pipeline isn't electrically conductive.				

Process connections

Flange	
EN 1092-1	DN2001600 in PN 640 (others on request)
ASME	864" in 150300 lb RF (others on request)
JIS	DN2001600 in JIS 1020 K (others on request)
Design of gasket surface	RF (others on request)

2 TECHNICAL DATA

Electrical connections


General	Electrical connection is carried out in conformity with the VDE 0100 directive "Regulations for electrical power installations with line voltages up to 1000 V" or equivalent national specifications.			
Power supply	Standard: 100230 VAC (-15% / +10%), 50/60 Hz			
	Option 1: 24 VAC/DC (AC: -15% / +10%, 50/60 Hz; DC: -25% / +30%)			
Power consumption	AC: 22 VA			
Field current cable	Shielded cable must be used, no part of delivery.			
Signal cable	DS 300 (type A) Max. length: 600 m / 1950 ft (dependent on electrical conductivity).			
	BTS 300 (type B) Max. length: 600 m / 1950 ft			
Data interface cable	For transmission of measured level to IFC 300 F.			
	Shielded Liycy cable, 3 x 0.75 mm ²			
Cable entries	Standard: 2x M20 x 1.5 + 2x M16 x 1.5 EMC type			
	Option: ½" NPT			

Approvals and certificates

CE					
	This device fulfills the statutory requirements of the EC directives. The manufacturer certifies successful testing of the product by applying the CE mark.				
Electromagnetic compatibility	Directive: 2004/108/EC, NAMUR NE21/04				
	Harmonized standard: EN 61326-1 : 2006				
Low voltage directive	Directive: 2006/95/EC				
	Harmonized standard: EN 61010 : 2001				
Pressure equipment directive	Directive: 97/23/EC				
	Category I, II or SEP				
	Fluid group 1				
	Production module H				
Hazardous areas					
ATEX	Option: Ex zone 1, IECex				
Other approvals and standards					
Protection category acc. to	Standard: IP 66/67 (NEMA 4/4X/6)				
IEC 529 / EN 60529	Option: IP 68 (NEMA 6P)				
Vibration resistance	IEC 68-2-6				
Random vibration test	IEC 68-2-34				
Shock test	IEC 68-2-27				

2.2 Dimensions and weights

The inner pipe diameter should match the inner diameter of the flowmeter. Since the inner diameter is not a standard DN size, choose the inner pipe diameter to be just a little bit bigger than the flowmeter diameter. If a lot of sediment or fat is expected the optimal solution is to produce a diameter compensation ring on both sides to have smooth transits.

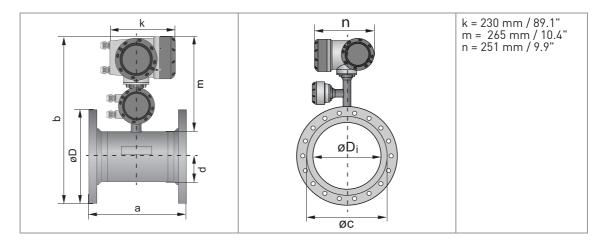

Detailed 2D and 3D drawings are available on the website of the manufacturer.

EN 1092-1

Nomir	nal size	Dimensions [mm]						Approx.
DN PN		а	b	Øc	d	ØD	ØD _i	weight [kg]
200	10	350	582	291	146	340	189	40
250	10	400	630	331	166	395	231	54
300	10	500	680	381	191	445	281	66
350	10	500	733	428	214	505	316	95
400	10	600	791	483	242	565	365	115
500	10	600	894	585	293	670	467	145
600	10	600	1003	694	347	780	567	180
700	10	700	1120	812	406	895	666	265
800	10	800	1235	922	461	1015	768	350
900	10	900	1356	1064	532	1115	863	425
1000	10	1000	1447	1132	566	1230	965	520
1200	6	1200	1639	1340	670	1405	1169	659
1400	6	1400	1842	1521	761	1630	1367	835
1600	6	1600	2042	1721	861	1830	1549	1659

2 TECHNICAL DATA

150 lb flanges

Nomir	nal size	Dimensions [inches]							
ASME ①	PN [psi]	а	b	Øc	d	ØD	ØD _i	weight [lb]	
8	284	13.78	22.93	11.46	5.75	13.5	7.44	90	
10	284	15.75	24.80	13.03	6.54	16.0	9.09	120	
12	284	19.69	26.76	15	7.52	19.0	11.06	145	
14	284	27.56	30.22	16.85	9.8	21.0	12.44	210	
16	284	31.5	31.13	19.02	9.53	23.5	14.37	255	
20	284	31.5	35.21	23.03	11.54	27.5	18.39	320	
24	284	31.5	39.50	27.32	13.66	32.0	22.32	400	
28	Class D	35.43	44.71	31.97	15.98	36.5	26.22	692	
32	Class D	39.37	49.51	36.3	18.15	41.8	30.24	1031	
36	Class D	43.31	54.42	41.89	20.94	46.0	33.98	1267	
40	Class D	47.24	58.14	44.57	22.28	50.8	37.99	1554	
48	Class D	55.12	66.61	52.76	26.38	59.5	46.02	2242	
① Nomir	(1) Nominal size ≤ 24 ": ASME; > 24": AWWA								

2.3 Measuring accuracy

The measuring accuracy for partly filled pipes and completely filled pipes are different. In these graphs it is assumed that the velocity at full scale value is at least 1 m/s (is also the standard value for calibration, since it will result in the most accurate measurements).

Partly filled:

• v @ Full Scale \geq 1 m/s / 3.3 ft/s: \leq 1% of Full Scale

Fully filled:

- $v \ge 1 \text{ m/s} / 3.3 \text{ ft/s} \le 1\% \text{ of MV}$
- $v < 1 \text{ m/s} / 3.3 \text{ ft/s} \le 0.5\% \text{ of MV} + 5 \text{ mm/s} / 0.2 \text{ inch/s} (see following graph)$

Fully filled pipes

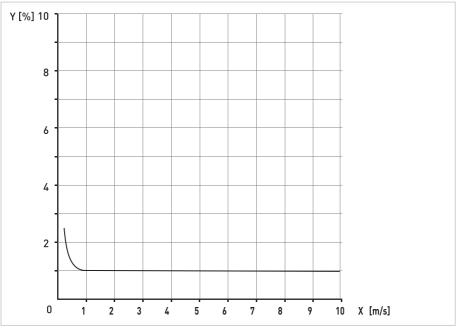


Figure 2-1: Maximum measuring error of measured value

3.1 Intended use

The TIDALFLUX 2300 F is especially designed for measuring the flow of conductive fluids, in partially filled pipes. It can only be combined with the IFC 300 PF electromagnetic flow converter.

3.2 General notes on installation

Inspect the cartons carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.

Do a check of the packing list to make sure that you have all the elements given in the order.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

3.2.1 Vibration

Vibration

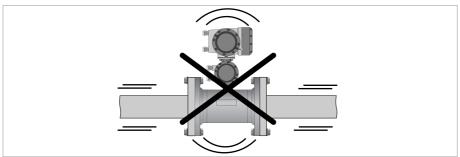


Figure 3-1: Avoid vibrations

3.2.2 Magnetic field

Magnetic filed

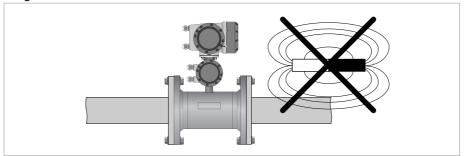


Figure 3-2: Avoid magnetic fields

3.3 Installation conditions

3.3.1 Inlet and outlet

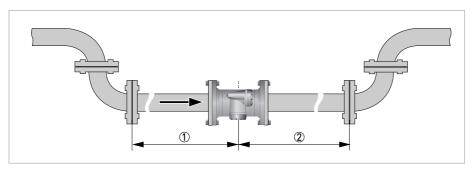


Figure 3-3: Recommended inlet and outlet sections, top view (1) ≥ 5 DN (2) ≥ 3 DN

3.3.2 Control valve

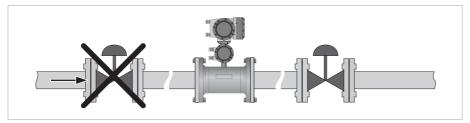


Figure 3-4: Installation before control valve

3.3.3 Slope

The accuracy is influenced by the slope. Stay within $\pm 1\%$ to get the most accurate measurements!

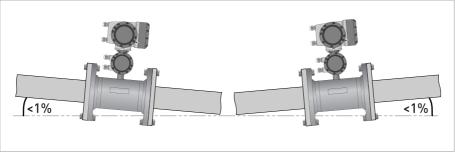


Figure 3-5: Recommended slope

3.3.4 Mounting advice for difficult situations

If you can not meet the installation conditions install the flowmeter between two containers. The inlet to the flowmeter must be higher than the outlet of the fluid. In this way you will have a calm flow into the flowmeter, resulting in a highly accurate measurement. The sizes of the containers must be proportional to the size of the flowmeter.

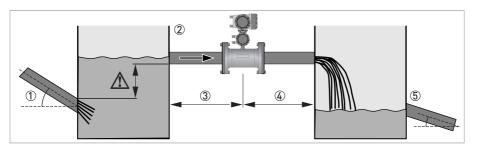


Figure 3-6: Installing in difficult situations

- ① Use a container ② if the Inlet pipe has a slope > 1%. Make sure that the outlet level of this pipe is below the inlet to the flowmeter.
- Inlet container
- ③ Inlet section of 10 DN
- ④ Outlet section of 5 DN
- (5) Outlet container advisable if outlet pipe has a slope > 1%.

Always use a free exit pipe to prevent backflow in the flow sensor and to keep the velocity at the maximum flow at least at 1 m/s.

3.3.5 Open discharge

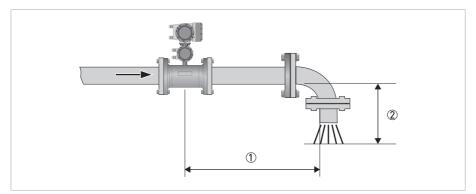


Figure 3-7: Open discharge

① ≥ 5 DN

2 Make sure that the water level stays below the pipe outlet.

3.3.6 Cleaning of flow sensor

The flow sensor is highly resistant against dirt and the measurement will rarely be influenced by anything. However, it is advisable to create a possiblity for cleaning just in front or behind the sensor.

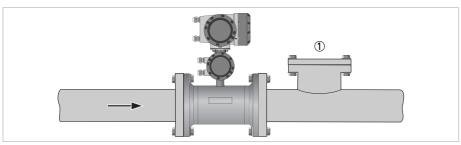


Figure 3-8: Option for cleaning of flow sensor

1 Opening for cleaning

3.3.7 Flange deviation

Max. permissible deviation of pipe flange faces: $L_{max} - L_{min} \le 0.5 \text{ mm} / 0.02"$

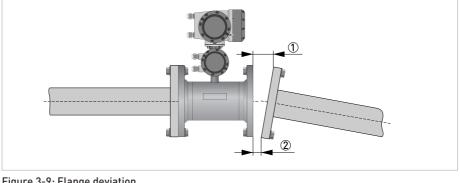


Figure 3-9: Flange deviation

1 L_{max}

2 L_{min}

3.3.8 Mounting position

Only install the flow sensor in the shown position to keep the electrodes under water. Limit the rotation to $\pm 2^{\circ}$ to maintain the accuracy.

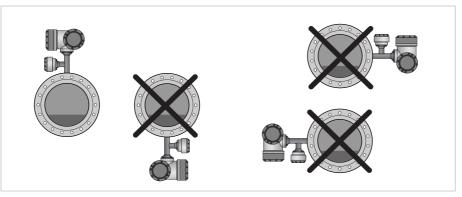


Figure 3-10: Mounting position

3 INSTALLATION

3.4 Mounting

3.4.1 Torques and pressures

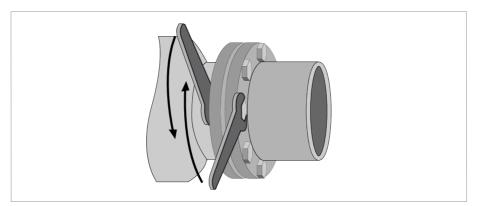


Figure 3-11: Tightening of bolts

Tightening of bolts

- Always tighten the bolts uniformely and in diagonally opposite sequence.
- Do not exceed the maximum torque value.
- Step 1: Apply approx. 50% of max. torque given in table.
- Step 2: Apply approx. 80% of max. torque given in table.
- Step 3: Apply 100% of max. torque given in table.

Nominal size DN [mm]	Pressure rating	Bolts	Max. torque [Nm]					
200	PN 10	8 x M 20	68					
250	PN 10	12 x M 20	65					
300	PN 10	12 x M 20	76					
350	PN 10	16 x M 20	75					
400	PN 10	16 x M 24	104					
500	PN 10	20 x M 24	107					
600	PN 10	20 x M 27	138					
700	PN 10	24 x M 27	163					
800	PN 10	24 x M 30	219					
900	PN 10	28 x M 30	205					
1000	PN 10	28 x M 35	261					

Tighten the bolts uniformely in diagonally opposite sequence.

Nominal size [inch]	Flange class [lb]	Bolts	Max. torque [Nm]
8	150	8 x 3/4"	69
10	150	12 x 7/8"	79
12	150	12 x 7/8"	104
14	150	12 x 1"	93
16	150	16 x 1"	91
18	150	16 x 1 1/8"	143
20	150	20 x 1 1/8"	127
24	150	20 x 1 1/4"	180
28	150	28 x 1 1/4"	161
32	150	28 x 1 1/2"	259
36	150	32 x 1 1/2"	269
40	150	36 x 1 1/2"	269

Information for bigger sizes is available on request.

3.4.2 Temperatures

Temperature range	Proces	s [°C]	Ambier	nt [°C]	Process	s [°F]	Ambient [°F]			
	min.	max.	min.	max.	min.	max.	min.	max.		
All versions	0	60	-40	65	32	140	-40	149		

4.1 Safety instructions

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!

Observe the national regulations for electrical installations!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

4.2 Important notes on electrical connection

Electrical connection is carried out in conformity with the VDE 0100 directive "Regulations for electrical power installations with line voltages up to 1000 V" or equivalent national regulations.

- Use suitable cable entries for the various electrical cables.
- The sensor and converter are configured together in the factory. For this reason, please connect the devices in pairs. Ensure that the sensor constant GK (see nameplates) are identically set.

For more information about the grounding of the flowmeter, refer to Grounding on page 22.

4.3 Cable lengths

The maximum allowed distance between the flow sensor and the converter is determined by the shortest cable length.

Interface cable: maximum length is 600 m / 1968 ft.

Type B (BTS) signal cable: maximum length is 600 m / 1968 ft.

Type A (DS) signal cable: maximum length depends on the conductivity of the fluid:

Electrical conductivity	Maximum length	
[µS/cm]	[m]	[ft]
50	120	394
100	200	656
200	400	1312
≥400	600	1968

Field current cable: The cross section of the cable determines the maximum length:

Cross section		Maximum length							
[mm ²]	[AWG]	[m]	[ft]						
2 x 0.75	2 x 18	150	492						
2 x 1.5	2 x 16	300	984						
2 x 2.5	2 x 14	600	1968						

4.4 Grounding

The device must be grounded in accordance with regulations in order to protect personnel against electric shocks.

4.4.1 Mounting grounding rings

In order to get a reliable height measurement it is **absolutely necessary** that the inner side of the connecting pipeline is electrically conductive and connected to ground. If not, tailor-made grounding rings with a cylindrical part can be delivered. Please contact your local agency in case of doubt.

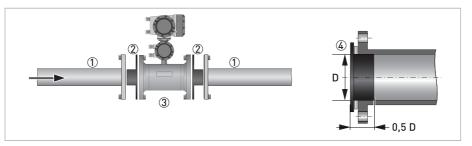


Figure 4-1: Grounding with grounding rings

- ① Existing pipeline
- 2 Grounding rings, custom made to inner diameter of pipeline
- ③ TIDALFLUX
- (4) Insert the cylindrical part of the grounding ring into the pipeline. Use an appropriate gasket between the grounding ring and the flange.

Sizes of the grounding rings are diameter dependent and available on request.

4.5 Connection diagrams

For the connection diagrams please refer to the documentation of the applicable signal converter.

NOTES 5



KROHNE product overview

- Electromagnetic flowmeters
- Variable area flowmeters
- Ultrasonic flowmeters
- Mass flowmeters
- Vortex flowmeters
- Flow controllers
- Level meters
- Temperature meters
- Pressure meters
- Analysis products
- Products and systems for the oil & gas industry
- Measuring systems for the marine industry

Head Office KROHNE Messtechnik GmbH Ludwig-Krohne-Str. 5 47058 Duisburg (Germany) Tel.:+49 (0)203 301 0 Fax:+49 (0)203 301 10389 info@krohne.de

The current list of all KROHNE contacts and addresses can be found at: www.krohne.com

